

OsmoHLR VTY Reference

Copyright © 2017

This work is copyright by sysmocom - s.f.m.c. GmbH. All rights reserved.

COLLABORATORS

	<i>TITLE :</i> OsmoHLR VTY Reference		
<i>ACTION</i>	<i>NAME</i>	<i>DATE</i>	<i>SIGNATURE</i>
WRITTEN BY		October 29, 2020	

REVISION HISTORY

NUMBER	DATE	DESCRIPTION	NAME
v1	18th September 2017	Initial	nh

Contents

1	VTY reference	1
1.1	Common Commands	1
1.1.1	end	2
1.1.2	exit	2
1.1.3	help	2
1.1.4	list	2
1.1.5	show running-config	3
1.1.6	write	3
1.1.7	write file [PATH]	3
1.1.8	write memory	3
1.1.9	write terminal	4
1.2	view	4
1.2.1	enable	4
1.2.2	logging color (0 1)	4
1.2.3	logging disable	5
1.2.4	logging enable	5
1.2.5	logging filter all (0 1)	5
1.2.6	logging level (main db acl ssl ms lookup l ldg sm l global l lapd linp lmux lmill mibl...	6
1.2.7	logging level force-all (debug info notice error fatal)	8
1.2.8	logging level set-all (debug info notice error fatal)	8
1.2.9	logging print category (0 1)	9
1.2.10	logging print category-hex (0 1)	9
1.2.11	logging print extended-timestamp (0 1)	10
1.2.12	logging print file (0 1 basename) [last]	10
1.2.13	logging print level (0 1)	11
1.2.14	logging set-log-mask MASK	11
1.2.15	logging timestamp (0 1)	11
1.2.16	logp (main db acl ssl ms lookup l ldg sm l global l lapd linp lmux lmill mibl sm lctr...	12
1.2.17	no logging level force-all	14
1.2.18	show alarms	14

1.2.19	show asciidoc counters	15
1.2.20	show cpu-sched threads	15
1.2.21	show gsup-connections	15
1.2.22	show history	16
1.2.23	show logging vty	16
1.2.24	show mslookup services	16
1.2.25	show online-help	17
1.2.26	show rate-counters	17
1.2.27	show stats	17
1.2.28	show stats level (globalpeerlsubscriber)	18
1.2.29	show subscriber (imsilmsisdnlidlimei) IDENT	18
1.2.30	show talloc-context (applicationall) (fullbriefDEPTH)	19
1.2.31	show talloc-context (applicationall) (fullbriefDEPTH) filter REGEXP	19
1.2.32	show talloc-context (applicationall) (fullbriefDEPTH) tree ADDRESS	20
1.2.33	show version	20
1.2.34	subscriber (imsilmsisdnlidlimei) IDENT show	21
1.2.35	terminal length <0-512>	21
1.2.36	terminal no length	22
1.2.37	who	22
1.3	enable	22
1.3.1	configure terminal	22
1.3.2	copy running-config startup-config	23
1.3.3	disable	23
1.3.4	logging color (01)	23
1.3.5	logging disable	24
1.3.6	logging enable	24
1.3.7	logging filter all (01)	24
1.3.8	logging level (mainldblaucsslmslookuplluldgsmllgloballlapdllinpllmuxllmillmibl...	25
1.3.9	logging level force-all (debuglinfolnoticeerrorlfatal)	27
1.3.10	logging level set-all (debuglinfolnoticeerrorlfatal)	27
1.3.11	logging print category (01)	28
1.3.12	logging print category-hex (01)	28
1.3.13	logging print extended-timestamp (01)	29
1.3.14	logging print file (01 basename) [last]	29
1.3.15	logging print level (01)	30
1.3.16	logging set-log-mask MASK	30
1.3.17	logging timestamp (01)	30
1.3.18	logp (mainldblaucsslmslookuplluldgsmllgloballlapdllinpllmuxllmillmibllmsllctr...	31
1.3.19	no logging level force-all	33

1.3.20	show alarms	33
1.3.21	show asciidoc counters	34
1.3.22	show cpu-sched threads	34
1.3.23	show gsup-connections	34
1.3.24	show history	35
1.3.25	show logging vty	35
1.3.26	show mslookup services	35
1.3.27	show online-help	36
1.3.28	show rate-counters	36
1.3.29	show startup-config	36
1.3.30	show stats	36
1.3.31	show stats level (globalpeer subscriber)	37
1.3.32	show subscriber (imsilmsisdn limei) IDENT	37
1.3.33	show talloc-context (application all) (full brief DEPTH)	38
1.3.34	show talloc-context (application all) (full brief DEPTH) filter REGEXP	38
1.3.35	show talloc-context (application all) (full brief DEPTH) tree ADDRESS	39
1.3.36	show version	39
1.3.37	stats report	40
1.3.38	stats reset	40
1.3.39	subscriber (imsilmsisdn limei) IDENT delete	40
1.3.40	subscriber (imsilmsisdn limei) IDENT show	41
1.3.41	subscriber (imsilmsisdn limei) IDENT update aud2g (comp128v1 comp128v2 comp128...	41
1.3.42	subscriber (imsilmsisdn limei) IDENT update aud2g none	42
1.3.43	subscriber (imsilmsisdn limei) IDENT update aud3g milenage k K (op opc) OP_C [...	43
1.3.44	subscriber (imsilmsisdn limei) IDENT update aud3g none	44
1.3.45	subscriber (imsilmsisdn limei) IDENT update imei (none IMEI)	44
1.3.46	subscriber (imsilmsisdn limei) IDENT update msisdn (none MSISDN)	45
1.3.47	subscriber (imsilmsisdn limei) IDENT update network-access-mode (none cs ps cs...	46
1.3.48	subscriber imsi IDENT create	47
1.3.49	terminal length <0-512>	47
1.3.50	terminal monitor	47
1.3.51	terminal no length	48
1.3.52	terminal no monitor	48
1.3.53	who	48
1.4	config	48
1.4.1	banner motd default	49
1.4.2	banner motd file [FILE]	49
1.4.3	cpu-sched	49
1.4.4	ctrl	50

1.4.5	enable password (8l) WORD	50
1.4.6	enable password LINE	50
1.4.7	hlr	51
1.4.8	hostname WORD	51
1.4.9	line vty	51
1.4.10	log alarms <2-32700>	51
1.4.11	log file .FILENAME	52
1.4.12	log gsmtap [HOSTNAME]	52
1.4.13	log stderr	52
1.4.14	log syslog (authpriv cron daemon ftp lpr mail news user uucp)	53
1.4.15	log syslog local <0-7>	53
1.4.16	mslookup	54
1.4.17	no banner motd	54
1.4.18	no enable password	54
1.4.19	no hostname [HOSTNAME]	55
1.4.20	no log alarms	55
1.4.21	no log file .FILENAME	55
1.4.22	no log stderr	56
1.4.23	no log syslog	56
1.4.24	no service advanced-vty	56
1.4.25	no service terminal-length [<0-512>]	57
1.4.26	no stats reporter log	57
1.4.27	no stats reporter statsd	57
1.4.28	password (8l) WORD	58
1.4.29	password LINE	58
1.4.30	service advanced-vty	58
1.4.31	service terminal-length <0-512>	59
1.4.32	show history	59
1.4.33	stats interval <0-65535>	59
1.4.34	stats reporter log	60
1.4.35	stats reporter statsd	60
1.5	config-log	60
1.5.1	logging color (0l1)	60
1.5.2	logging filter all (0l1)	61
1.5.3	logging level (main db auc ss ms lookup lul dgsm lg lobal ll apd lin pl mux llm illm ibl...	61
1.5.4	logging level force-all (debug info notice error fatal)	63
1.5.5	logging level set-all (debug info notice error fatal)	64
1.5.6	logging print category (0l1)	65
1.5.7	logging print category-hex (0l1)	65

1.5.8	logging print extended-timestamp (0 1)	66
1.5.9	logging print file (0 1 basename) [last]	66
1.5.10	logging print level (0 1)	67
1.5.11	logging timestamp (0 1)	67
1.5.12	no logging level force-all	67
1.6	config-stats	68
1.6.1	disable	68
1.6.2	enable	68
1.6.3	flush-period <0-65535>	68
1.6.4	level (global peer subscriber)	69
1.6.5	local-ip ADDR	69
1.6.6	mtu <100-65535>	69
1.6.7	no local-ip	70
1.6.8	no mtu	70
1.6.9	no prefix	70
1.6.10	prefix PREFIX	70
1.6.11	remote-ip ADDR	71
1.6.12	remote-port <1-65535>	71
1.7	config-line	71
1.7.1	bind A.B.C.D [<0-65535>]	71
1.7.2	login	72
1.7.3	no login	72
1.8	config-ctrl	72
1.8.1	bind A.B.C.D	72
1.9	config-cpu-sched	73
1.9.1	cpu-affinity (self all <0-4294967295> THREADNAME) CPUHEXMASK [delay]	73
1.9.2	policy rr <1-32>	73
1.10	config-hlr	74
1.10.1	database PATH	74
1.10.2	euse NAME	74
1.10.3	gsup	74
1.10.4	ncss-guard-timeout <0-255>	74
1.10.5	no euse NAME	75
1.10.6	no store-imei	75
1.10.7	no subscriber-create-on-demand	75
1.10.8	no ussd default-route	76
1.10.9	no ussd route prefix PREFIX	76
1.10.10	store-imei	76
1.10.11	subscriber-create-on-demand (no-msisdn <3-15>) (nonelcs pslcs+ps)	77

1.10.12 ussd default-route external EUSE	77
1.10.13 ussd route prefix PREFIX external EUSE	78
1.10.14 ussd route prefix PREFIX internal (own-msisdnlow-imsi)	78
1.11 config-hlr-gsup	79
1.11.1 bind ip A.B.C.D	79
1.11.2 ipa-name NAME	79
1.12 config-hlr-euse	79
1.13 config-mslookup	79
1.13.1 client	79
1.13.2 mdns bind [IP] [<1-65535>]	80
1.13.3 mdns domain-suffix DOMAIN_SUFFIX	80
1.13.4 no client	80
1.13.5 no mdns bind	81
1.13.6 no server	81
1.13.7 server	81
1.14 config-mslookup-server	82
1.14.1 mdns bind [IP] [<1-65535>]	82
1.14.2 mdns domain-suffix DOMAIN_SUFFIX	82
1.14.3 msc ipa-name .IPA_NAME	82
1.14.4 no mdns bind	83
1.14.5 no service NAME	83
1.14.6 no service NAME at IP <1-65535>	83
1.14.7 service NAME at IP <1-65535>	84
1.15 config-mslookup-server-msc	84
1.15.1 no service NAME	84
1.15.2 no service NAME at IP <1-65535>	85
1.15.3 service NAME at IP <1-65535>	85
1.16 config-mslookup-client	86
1.16.1 gateway-proxy IP [<1-65535>]	86
1.16.2 mdns bind [IP] [<1-65535>]	86
1.16.3 mdns domain-suffix DOMAIN_SUFFIX	86
1.16.4 no gateway-proxy	87
1.16.5 no mdns bind	87
1.16.6 timeout <1-100000>	87

List of Tables

1.1	VTY Parameter Patterns	1
1.2	VTY port numbers	1

Chapter 1

VTY reference

The Virtual Tele Type (VTY) has the concept of nodes and commands. This chapter lists all nodes and the commands that are available within the node. Each command can consist out of several words followed by a variable number of parameters. There are common patterns for the parameters, these include IPv4 addresses, number ranges, a word, a line of text and choice. The following will explain the commonly used patterns.

Pattern	Example	Explanation
A.B.C.D	127.0.0.1	A IPv4 address
TEXT	example01	A single string without any spaces, tabs
.TEXT	Some information	A line of text
(OptionA OptionB OptionC)	OptionA	A choice between a list of available options
<0-10>	5	A number from a range

Table 1.1: VTY Parameter Patterns

The application is configured through the VTY. For configuring a system one needs to enter the **enable** node and then enter the **configure terminal** command. Then the configuration can be made according to the available commands. After the system has been configured one can use the **write** command to write the new configuration to the configuration file. The new file will be used after the application has been restarted.

The following table lists the TCP port numbers of the VTY for the various Osmocom GSM related programs as used on sysmocom products:

Port Number	Software
4240	osmo-pcu
4241	osmo-bts
4242	osmo-nitb, osmo-bsc
4243	osmo-bsc_mgcp
4244	osmo-bsc_nat
4245	osmo-sgsn
4246	osmo-gbproxy

Table 1.2: VTY port numbers

Common Commands

These commands are available on all VTY nodes. They are listed here only once, to unclutter the VTY reference.

end

Command

```
end
```

Parameters

end

End current mode and change to enable mode.

exit

Command

```
exit
```

Parameters

exit

Exit current mode and down to previous mode

help

Command

```
help
```

Parameters

help

Description of the interactive help system

list

Command

```
list
```

Parameters

list

Print command list

show running-config

Command

```
show running-config
```

Parameters

show

Show running system information

running-config

running configuration

write

Command

```
write
```

Parameters

write

Write running configuration to memory, network, or terminal

write file [PATH]

Command

```
write file [PATH]
```

Parameters

write

Write running configuration to memory, network, or terminal

file

Write to configuration file

[PATH]

Set file path to store the config, or replace if already exists

write memory

Command

```
write memory
```

Parameters

write

Write running configuration to memory, network, or terminal

memory

Write configuration to the file (same as write file)

write terminal

Command

```
write terminal
```

Parameters

write

Write running configuration to memory, network, or terminal

terminal

Write to terminal

view

The view node is the default node when connecting to the VTY interface. This node does not require any additional permission and allows to introspect the application.

enable

Command

```
enable
```

Parameters

enable

Turn on privileged mode command

logging color (0|1)

Command

```
logging color (0|1)
```

Parameters

logging

Configure logging

color

Configure color-printing for log messages

0

Don't use color for printing messages

1

Use color for printing messages

logging disable

Command

```
logging disable
```

Parameters

logging

Configure logging

disable

Disables logging to this vty

logging enable

This command is required to make logging commands available on the telnet VTY.

Command

```
logging enable
```

Parameters

logging

Configure logging

enable

Enables logging to this vty

logging filter all (0|1)

Disable/enable general log output on a given target. Typically, 'logging filter all 1' allows to see the usual log output on a given target. Setting to '0' can be useful when logging to the telnet VTY console: mute all log output to allow typing VTY commands on the telnet prompt without interference from log output; 'logging filter all 1' then re-enables logging in the same log output configuration as before. Some applications provide more specific filters, e.g. to log a given IMSI only. To employ such filters, set 'logging filter all 0' to disable general logging, and then enable a more specific filter instead.

Command

```
logging filter all (0|1)
```

Parameters

logging

Configure logging

filter

Filter log messages

all

Do you want to log all messages?

0

Only print messages matched by other filters

1

Bypass filter and print all messages

logging level (main|db|auc|ss|mslookup|lu|dgsm|lglobal|llapd|linp|lmux|lmi|lmib|...

Command

```
logging level (main|db|auc|ss|mslookup|lu|dgsm|lglobal|llapd|linp|lmux|lmi|lmib|lsms| ↵  
lctrl|lgtp|lstats|lgsup|loap|lss7|lsccp|lsua|lm3ua|lmgcp|ljibuf|lrspro) (debug|info ↵  
|notice|error|fatal)
```

Parameters

logging

Configure logging

level

Set the log level for a specified category

main

Main Program

db

Database Layer

auc

Authentication Center

ss

Supplementary Services

mslookup

Mobile Subscriber Lookup

lu

Location Updating

dgsm

Distributed GSM: MS lookup and proxy

lglobal

Library-internal global log family

llapd

LAPD in libosmogsm

linp

A-bis Input Subsystem

lmux

A-bis B-Subchannel TRAU Frame Multiplex

lmi

A-bis Input Driver for Signalling

lmib

A-bis Input Driver for B-Channels (voice)

lsms

Layer3 Short Message Service (SMS)

lctrl

Control Interface

lgtp

GPRS GTP library

lstats

Statistics messages and logging

lgsup

Generic Subscriber Update Protocol

loap

Osmocom Authentication Protocol

lss7

libosmo-sigtran Signalling System 7

lsccp

libosmo-sigtran SCCP Implementation

lsua

libosmo-sigtran SCCP User Adaptation

lm3ua

libosmo-sigtran MTP3 User Adaptation

lmgcp

libosmo-mgcp Media Gateway Control Protocol

ljibuf

libosmo-netif Jitter Buffer

lrspro

Remote SIM protocol

debug

Log debug messages and higher levels

info

Log informational messages and higher levels

notice

Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

logging level force-all (debug|info|notice|error|fatal)

Command

```
logging level force-all (debug|info|notice|error|fatal)
```

Parameters

logging

Configure logging

level

Set the log level for a specified category

force-all

Globally force all logging categories to a specific level. This is released by the 'no logging level force-all' command. Note: any 'logging level <category> <level>' commands will have no visible effect after this, until the forced level is released.

debug

Log debug messages and higher levels

info

Log informational messages and higher levels

notice

Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

logging level set-all (debug|info|notice|error|fatal)

Command

```
logging level set-all (debug|info|notice|error|fatal)
```

Parameters

logging

Configure logging

level

Set the log level for a specified category

set-all

Once-off set all categories to the given log level. There is no single command to take back these changes -- each category is set to the given level, period.

debug

Log debug messages and higher levels

info

Log informational messages and higher levels

notice

Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

logging print category (0|1)

Command

```
logging print category (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

category

Configure log message

0

Don't prefix each log message

1

Prefix each log message with category/subsystem name

logging print category-hex (0|1)

Command

```
logging print category-hex (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

category-hex

Configure log message

0

Don't prefix each log message

1

Prefix each log message with category/subsystem nr in hex ('<000b>')

logging print extended-timestamp (0|1)

Command

```
logging print extended-timestamp (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

extended-timestamp

Configure log message timestamping

0

Don't prefix each log message

1

Prefix each log message with current timestamp with YYYYMMDDhhmmssnnn

logging print file (0|1|basename) [last]

Command

```
logging print file (0|1|basename) [last]
```

Parameters

logging

Configure logging

print

Log output settings

file

Configure log message

0

Don't prefix each log message

1

Prefix each log message with the source file and line

basename

Prefix each log message with the source file's basename (strip leading paths) and line

[last]

Log source file info at the end of a log line. If omitted, log source file info just before the log text.

logging print level (0|1)

Command

```
logging print level (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

level

Configure log message

0

Don't prefix each log message

1

Prefix each log message with the log level name

logging set-log-mask MASK

Command

```
logging set-log-mask MASK
```

Parameters

logging

Configure logging

set-log-mask

Set the logmask of this logging target

MASK

List of logging categories to log, e.g. 'abc:mno:xyz'. Available log categories depend on the specific application, refer to the 'logging level' command. Optionally add individual log levels like 'abc,1:mno,3:xyz,5', where the level numbers are LOGL_DEBUG=1 LOGL_INFO=3 LOGL_NOTICE=5 LOGL_ERROR=7 LOGL_FATAL=8

logging timestamp (0|1)

Command

```
logging timestamp (0|1)
```

Parameters

logging

Configure logging

timestamp

Configure log message timestamping

0

Don't prefix each log message

1

Prefix each log message with current timestamp

logp (main|db|auc|ss|mslookup|lu|dgsm|lglobal|llapd|linp|lmux|lmi|lmib|lsms|lctr...**Command**

```
logp (main|db|auc|ss|mslookup|lu|dgsm|lglobal|llapd|linp|lmux|lmi|lmib|lsms|lctrl|lntp| ↵
    lstats|lgsup|loap|lss7|lscpp|lsua|lm3ua|lmgcp|ljibuf|lrspro) (debug|info|notice| ↵
    error|fatal) .LOGMESSAGE
```

Parameters**logp**

Print a message on all log outputs; useful for placing markers in test logs

main

Main Program

db

Database Layer

auc

Authentication Center

ss

Supplementary Services

mslookup

Mobile Subscriber Lookup

lu

Location Updating

dgsm

Distributed GSM: MS lookup and proxy

lglobal

Library-internal global log family

llapd

LAPD in libosmogsm

linp

A-bis Input Subsystem

lmux
A-bis B-Subchannel TRAU Frame Multiplex

lmi
A-bis Input Driver for Signalling

lmib
A-bis Input Driver for B-Channels (voice)

lsms
Layer3 Short Message Service (SMS)

lctrl
Control Interface

lgtp
GPRS GTP library

lstats
Statistics messages and logging

lgsup
Generic Subscriber Update Protocol

loap
Osmocom Authentication Protocol

lss7
libosmo-sigtran Signalling System 7

lsccp
libosmo-sigtran SCCP Implementation

lsua
libosmo-sigtran SCCP User Adaptation

lm3ua
libosmo-sigtran MTP3 User Adaptation

lmgcp
libosmo-mgcp Media Gateway Control Protocol

ljibuf
libosmo-netif Jitter Buffer

lrspro
Remote SIM protocol

debug
Log debug messages and higher levels

info
Log informational messages and higher levels

notice
Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

.LOGMESSAGE

Arbitrary message to log on given category and log level

no logging level force-all

Command

```
no logging level force-all
```

Parameters

no

Negate a command or set its defaults

logging

Configure logging

level

Set the log level for a specified category

force-all

Release any globally forced log level set with 'logging level force-all <level>'

show alarms

Command

```
show alarms
```

Parameters

show

Show running system information

alarms

Show current logging configuration

show asciidoc counters

Command

```
show asciidoc counters
```

Parameters

show

Show running system information

asciidoc

Asciidoc generation

counters

Generate table of all registered counters

show cpu-sched threads

Command

```
show cpu-sched threads
```

Parameters

show

Show running system information

cpu-sched

Show Sched section information

threads

Show information about running threads)

show gsup-connections

Command

```
show gsup-connections
```

Parameters

show

Show running system information

gsup-connections

GSUP Connections from VLRs, SGSNs, EUSEs

show history

Command

```
show history
```

Parameters

show

Show running system information

history

Display the session command history

show logging vty

Command

```
show logging vty
```

Parameters

show

Show running system information

logging

Show current logging configuration

vty

Show current logging configuration for this vty

show mslookup services

Command

```
show mslookup services
```

Parameters

show

Show running system information

mslookup

Distributed GSM / mslookup related information

services

List configured service addresses as sent to remote mslookup requests

show online-help

Command

```
show online-help
```

Parameters

show

Show running system information

online-help

Online help

show rate-counters

Command

```
show rate-counters
```

Parameters

show

Show running system information

rate-counters

Show all rate counters

show stats

Command

```
show stats
```

Parameters

show

Show running system information

stats

Show statistical values

show stats level (global|peer|subscriber)

Command

```
show stats level (global|peer|subscriber)
```

Parameters

show

Show running system information

stats

Show statistical values

level

Set the maximum group level

global

Show global groups only

peer

Show global and network peer related groups

subscriber

Show global, peer, and subscriber groups

show subscriber (imsi|msisdn|id|imei) IDENT

Command

```
show subscriber (imsi|msisdn|id|imei) IDENT
```

Parameters

show

Show running system information

subscriber

Subscriber management commands

imsi

Identify subscriber by IMSI

msisdn

Identify subscriber by MSISDN (phone number)

id

Identify subscriber by database ID

imei

Identify subscriber by IMEI

IDENT

IMSI/MSISDN/ID/IMEI of the subscriber

show talloc-context (application|all) (full|brief|DEPTH)

Command

```
show talloc-context (application|all) (full|brief|DEPTH)
```

Parameters

show

Show running system information

talloc-context

Show talloc memory hierarchy

application

Application's context

all

All contexts, if NULL-context tracking is enabled

full

Display a full talloc memory hierarchy

brief

Display a brief talloc memory hierarchy

DEPTH

Specify required maximal depth value

show talloc-context (application|all) (full|brief|DEPTH) filter REGEXP

Command

```
show talloc-context (application|all) (full|brief|DEPTH) filter REGEXP
```

Parameters

show

Show running system information

talloc-context

Show talloc memory hierarchy

application

Application's context

all

All contexts, if NULL-context tracking is enabled

full

Display a full talloc memory hierarchy

brief

Display a brief talloc memory hierarchy

DEPTH

Specify required maximal depth value

filter

Filter chunks using regular expression

REGEXP

Regular expression

show talloc-context (application|all) (full|brief|DEPTH) tree ADDRESS**Command**

```
show talloc-context (application|all) (full|brief|DEPTH) tree ADDRESS
```

Parameters**show**

Show running system information

talloc-context

Show talloc memory hierarchy

application

Application's context

all

All contexts, if NULL-context tracking is enabled

full

Display a full talloc memory hierarchy

brief

Display a brief talloc memory hierarchy

DEPTH

Specify required maximal depth value

tree

Display only a specific memory chunk

ADDRESS

Chunk address (e.g. 0xdeadbeef)

show version**Command**

```
show version
```

Parameters**show**

Show running system information

version

Displays program version

subscriber (imsi|msisdn|id|imei) IDENT show

Command

```
subscriber (imsi|msisdn|id|imei) IDENT show
```

Parameters

subscriber

Subscriber management commands

imsi

Identify subscriber by IMSI

msisdn

Identify subscriber by MSISDN (phone number)

id

Identify subscriber by database ID

imei

Identify subscriber by IMEI

IDENT

IMSI/MSISDN/ID/IMEI of the subscriber

show

Show subscriber information

terminal length <0-512>

Command

```
terminal length <0-512>
```

Parameters

terminal

Set terminal line parameters

length

Set number of lines on a screen

<0-512>

Number of lines on screen (0 for no pausing)

terminal no length

Command

```
terminal no length
```

Parameters

terminal

Set terminal line parameters

no

Negate a command or set its defaults

length

Set number of lines on a screen

who

Command

```
who
```

Parameters

who

Display who is on vty

enable

The enable node is a privileged node, allowing to make changes to the configuration and to access further commands like 'configure'. All commands seen on the view node are also available here.

configure terminal

Command

```
configure terminal
```

Parameters

configure

Configuration from vty interface

terminal

Configuration terminal

copy running-config startup-config

Command

```
copy running-config startup-config
```

Parameters

copy

Copy configuration

running-config

Copy running config to...

startup-config

Copy running config to startup config (same as write file)

disable

Command

```
disable
```

Parameters

disable

Turn off privileged mode command

logging color (0|1)

Command

```
logging color (0|1)
```

Parameters

logging

Configure logging

color

Configure color-printing for log messages

0

Don't use color for printing messages

1

Use color for printing messages

logging disable

Command

```
logging disable
```

Parameters

logging

Configure logging

disable

Disables logging to this vty

logging enable

This command is required to make logging commands available on the telnet VTY.

Command

```
logging enable
```

Parameters

logging

Configure logging

enable

Enables logging to this vty

logging filter all (0|1)

Disable/enable general log output on a given target. Typically, 'logging filter all 1' allows to see the usual log output on a given target. Setting to '0' can be useful when logging to the telnet VTY console: mute all log output to allow typing VTY commands on the telnet prompt without interference from log output; 'logging filter all 1' then re-enables logging in the same log output configuration as before. Some applications provide more specific filters, e.g. to log a given IMSI only. To employ such filters, set 'logging filter all 0' to disable general logging, and then enable a more specific filter instead.

Command

```
logging filter all (0|1)
```

Parameters

logging

Configure logging

filter

Filter log messages

all

Do you want to log all messages?

0

Only print messages matched by other filters

1

Bypass filter and print all messages

logging level (main|db|auc|ss|mslookup|lu|dgsm|lglobal|llapd|linp|lmux|lmi|lmib|...

Command

```
logging level (main|db|auc|ss|mslookup|lu|dgsm|lglobal|llapd|linp|lmux|lmi|lmib|lsms| ↵  
lctrl|lgtp|lstats|lgsup|loap|lss7|lsccp|lsua|lm3ua|lmgcp|ljibuf|lrspro) (debug|info ↵  
|notice|error|fatal)
```

Parameters

logging

Configure logging

level

Set the log level for a specified category

main

Main Program

db

Database Layer

auc

Authentication Center

ss

Supplementary Services

mslookup

Mobile Subscriber Lookup

lu

Location Updating

dgsm

Distributed GSM: MS lookup and proxy

lglobal

Library-internal global log family

llapd

LAPD in libosmogsm

linp

A-bis Input Subsystem

lmux

A-bis B-Subchannel TRAU Frame Multiplex

lmi

A-bis Input Driver for Signalling

lmib

A-bis Input Driver for B-Channels (voice)

lsms

Layer3 Short Message Service (SMS)

lctrl

Control Interface

lgtp

GPRS GTP library

lstats

Statistics messages and logging

lgsup

Generic Subscriber Update Protocol

loap

Osmocom Authentication Protocol

lss7

libosmo-sigtran Signalling System 7

lsccp

libosmo-sigtran SCCP Implementation

lsua

libosmo-sigtran SCCP User Adaptation

lm3ua

libosmo-sigtran MTP3 User Adaptation

lmgcp

libosmo-mgcp Media Gateway Control Protocol

ljibuf

libosmo-netif Jitter Buffer

lrspro

Remote SIM protocol

debug

Log debug messages and higher levels

info

Log informational messages and higher levels

notice

Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

logging level force-all (debug|info|notice|error|fatal)

Command

```
logging level force-all (debug|info|notice|error|fatal)
```

Parameters

logging

Configure logging

level

Set the log level for a specified category

force-all

Globally force all logging categories to a specific level. This is released by the 'no logging level force-all' command. Note: any 'logging level <category> <level>' commands will have no visible effect after this, until the forced level is released.

debug

Log debug messages and higher levels

info

Log informational messages and higher levels

notice

Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

logging level set-all (debug|info|notice|error|fatal)

Command

```
logging level set-all (debug|info|notice|error|fatal)
```

Parameters

logging

Configure logging

level

Set the log level for a specified category

set-all

Once-off set all categories to the given log level. There is no single command to take back these changes -- each category is set to the given level, period.

debug

Log debug messages and higher levels

info

Log informational messages and higher levels

notice

Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

logging print category (0|1)

Command

```
logging print category (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

category

Configure log message

0

Don't prefix each log message

1

Prefix each log message with category/subsystem name

logging print category-hex (0|1)

Command

```
logging print category-hex (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

category-hex

Configure log message

0

Don't prefix each log message

1

Prefix each log message with category/subsystem nr in hex ('<000b>')

logging print extended-timestamp (0|1)

Command

```
logging print extended-timestamp (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

extended-timestamp

Configure log message timestamping

0

Don't prefix each log message

1

Prefix each log message with current timestamp with YYYYMMDDhhmmssnnn

logging print file (0|1|basename) [last]

Command

```
logging print file (0|1|basename) [last]
```

Parameters

logging

Configure logging

print

Log output settings

file

Configure log message

0

Don't prefix each log message

1

Prefix each log message with the source file and line

basename

Prefix each log message with the source file's basename (strip leading paths) and line

[last]

Log source file info at the end of a log line. If omitted, log source file info just before the log text.

logging print level (0|1)

Command

```
logging print level (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

level

Configure log message

0

Don't prefix each log message

1

Prefix each log message with the log level name

logging set-log-mask MASK

Command

```
logging set-log-mask MASK
```

Parameters

logging

Configure logging

set-log-mask

Set the logmask of this logging target

MASK

List of logging categories to log, e.g. 'abc:mno:xyz'. Available log categories depend on the specific application, refer to the 'logging level' command. Optionally add individual log levels like 'abc,1:mno,3:xyz,5', where the level numbers are LOGL_DEBUG=1 LOGL_INFO=3 LOGL_NOTICE=5 LOGL_ERROR=7 LOGL_FATAL=8

logging timestamp (0|1)

Command

```
logging timestamp (0|1)
```

Parameters

logging

Configure logging

timestamp

Configure log message timestamping

0

Don't prefix each log message

1

Prefix each log message with current timestamp

logp (main|db|auc|ss|mslookup|lu|dgsm|lglobal|llapd|linp|lmux|lmi|lmib|lsms|lctr...**Command**

```
logp (main|db|auc|ss|mslookup|lu|dgsm|lglobal|llapd|linp|lmux|lmi|lmib|lsms|lctrl|lntp| ↵
    lstats|lgsup|loap|lss7|lscpp|lsua|lm3ua|lmgcp|ljibuf|lrspro) (debug|info|notice| ↵
    error|fatal) .LOGMESSAGE
```

Parameters**logp**

Print a message on all log outputs; useful for placing markers in test logs

main

Main Program

db

Database Layer

auc

Authentication Center

ss

Supplementary Services

mslookup

Mobile Subscriber Lookup

lu

Location Updating

dgsm

Distributed GSM: MS lookup and proxy

lglobal

Library-internal global log family

llapd

LAPD in libosmogsm

linp

A-bis Input Subsystem

lmux
A-bis B-Subchannel TRAU Frame Multiplex

lmi
A-bis Input Driver for Signalling

lmib
A-bis Input Driver for B-Channels (voice)

lsms
Layer3 Short Message Service (SMS)

lctrl
Control Interface

lgtp
GPRS GTP library

lstats
Statistics messages and logging

lgsup
Generic Subscriber Update Protocol

loap
Osmocom Authentication Protocol

lss7
libosmo-sigtran Signalling System 7

lsccp
libosmo-sigtran SCCP Implementation

lsua
libosmo-sigtran SCCP User Adaptation

lm3ua
libosmo-sigtran MTP3 User Adaptation

lmgcp
libosmo-mgcp Media Gateway Control Protocol

ljibuf
libosmo-netif Jitter Buffer

lrspro
Remote SIM protocol

debug
Log debug messages and higher levels

info
Log informational messages and higher levels

notice
Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

.LOGMESSAGE

Arbitrary message to log on given category and log level

no logging level force-all

Command

```
no logging level force-all
```

Parameters

no

Negate a command or set its defaults

logging

Configure logging

level

Set the log level for a specified category

force-all

Release any globally forced log level set with 'logging level force-all <level>'

show alarms

Command

```
show alarms
```

Parameters

show

Show running system information

alarms

Show current logging configuration

show asciidoc counters

Command

```
show asciidoc counters
```

Parameters

show

Show running system information

asciidoc

Asciidoc generation

counters

Generate table of all registered counters

show cpu-sched threads

Command

```
show cpu-sched threads
```

Parameters

show

Show running system information

cpu-sched

Show Sched section information

threads

Show information about running threads)

show gsup-connections

Command

```
show gsup-connections
```

Parameters

show

Show running system information

gsup-connections

GSUP Connections from VLRs, SGSNs, EUSEs

show history

Command

```
show history
```

Parameters

show

Show running system information

history

Display the session command history

show logging vty

Command

```
show logging vty
```

Parameters

show

Show running system information

logging

Show current logging configuration

vty

Show current logging configuration for this vty

show mslookup services

Command

```
show mslookup services
```

Parameters

show

Show running system information

mslookup

Distributed GSM / mslookup related information

services

List configured service addresses as sent to remote mslookup requests

show online-help

Command

```
show online-help
```

Parameters

show

Show running system information

online-help

Online help

show rate-counters

Command

```
show rate-counters
```

Parameters

show

Show running system information

rate-counters

Show all rate counters

show startup-config

Command

```
show startup-config
```

Parameters

show

Show running system information

startup-config

Contentes of startup configuration

show stats

Command

```
show stats
```

Parameters

show

Show running system information

stats

Show statistical values

show stats level (global|peer|subscriber)

Command

```
show stats level (global|peer|subscriber)
```

Parameters

show

Show running system information

stats

Show statistical values

level

Set the maximum group level

global

Show global groups only

peer

Show global and network peer related groups

subscriber

Show global, peer, and subscriber groups

show subscriber (imsi|msisdn|id|imei) IDENT

Command

```
show subscriber (imsi|msisdn|id|imei) IDENT
```

Parameters

show

Show running system information

subscriber

Subscriber management commands

imsi

Identify subscriber by IMSI

msisdn

Identify subscriber by MSISDN (phone number)

id

Identify subscriber by database ID

imei

Identify subscriber by IMEI

IDENT

IMSI/MSISDN/ID/IMEI of the subscriber

show talloc-context (application|all) (full|brief|DEPTH)

Command

```
show talloc-context (application|all) (full|brief|DEPTH)
```

Parameters

show

Show running system information

talloc-context

Show talloc memory hierarchy

application

Application's context

all

All contexts, if NULL-context tracking is enabled

full

Display a full talloc memory hierarchy

brief

Display a brief talloc memory hierarchy

DEPTH

Specify required maximal depth value

show talloc-context (application|all) (full|brief|DEPTH) filter REGEXP

Command

```
show talloc-context (application|all) (full|brief|DEPTH) filter REGEXP
```

Parameters

show

Show running system information

talloc-context

Show talloc memory hierarchy

application

Application's context

all

All contexts, if NULL-context tracking is enabled

full

Display a full talloc memory hierarchy

brief

Display a brief talloc memory hierarchy

DEPTH

Specify required maximal depth value

filter

Filter chunks using regular expression

REGEXP

Regular expression

show talloc-context (application|all) (full|brief|DEPTH) tree ADDRESS**Command**

```
show talloc-context (application|all) (full|brief|DEPTH) tree ADDRESS
```

Parameters**show**

Show running system information

talloc-context

Show talloc memory hierarchy

application

Application's context

all

All contexts, if NULL-context tracking is enabled

full

Display a full talloc memory hierarchy

brief

Display a brief talloc memory hierarchy

DEPTH

Specify required maximal depth value

tree

Display only a specific memory chunk

ADDRESS

Chunk address (e.g. 0xdeadbeef)

show version**Command**

```
show version
```

Parameters**show**

Show running system information

version

Displays program version

stats report

Command

```
stats report
```

Parameters

stats

Stats related commands

report

Manurally trigger reporting of stats

stats reset

Command

```
stats reset
```

Parameters

stats

Stats related commands

reset

Reset all stats

subscriber (imsi|msisdn|id|imei) IDENT delete

Command

```
subscriber (imsi|msisdn|id|imei) IDENT delete
```

Parameters

subscriber

Subscriber management commands

imsi

Identify subscriber by IMSI

msisdn

Identify subscriber by MSISDN (phone number)

id

Identify subscriber by database ID

imei

Identify subscriber by IMEI

IDENT

IMSI/MSISDN/ID/IMEI of the subscriber

delete

Delete subscriber from database

subscriber (imsi|msisdn|id|imei) IDENT show

Command

```
subscriber (imsi|msisdn|id|imei) IDENT show
```

Parameters

subscriber

Subscriber management commands

imsi

Identify subscriber by IMSI

msisdn

Identify subscriber by MSISDN (phone number)

id

Identify subscriber by database ID

imei

Identify subscriber by IMEI

IDENT

IMSI/MSISDN/ID/IMEI of the subscriber

show

Show subscriber information

subscriber (imsi|msisdn|id|imei) IDENT update aud2g (comp128v1|comp128v2|comp128...

Command

```
subscriber (imsi|msisdn|id|imei) IDENT update aud2g (comp128v1|comp128v2|comp128v3|xor) ←  
ki KI
```

Parameters

subscriber

Subscriber management commands

imsi

Identify subscriber by IMSI

msisdn

Identify subscriber by MSISDN (phone number)

id

Identify subscriber by database ID

imei

Identify subscriber by IMEI

IDENT

IMSI/MSISDN/ID/IMEI of the subscriber

update

Set or update subscriber data

aud2g

Set 2G authentication data

comp128v1

Use COMP128v1 algorithm

comp128v2

Use COMP128v2 algorithm

comp128v3

Use COMP128v3 algorithm

xor

Use XOR algorithm

ki

Set Ki Encryption Key

KI

Ki as 32 hexadecimal characters

subscriber (imsi|msisdn|id|imei) IDENT update aud2g none**Command**

```
subscriber (imsi|msisdn|id|imei) IDENT update aud2g none
```

Parameters**subscriber**

Subscriber management commands

imsi

Identify subscriber by IMSI

msisdn

Identify subscriber by MSISDN (phone number)

id

Identify subscriber by database ID

imei

Identify subscriber by IMEI

IDENT

IMSI/MSISDN/ID/IMEI of the subscriber

update

Set or update subscriber data

aud2g

Set 2G authentication data

none

Delete 2G authentication data

subscriber (imsi|msisdn|id|imei) IDENT update aud3g milenage k K (op|opc) OP_C [...

Command

```
subscriber (imsi|msisdn|id|imei) IDENT update aud3g milenage k K (op|opc) OP_C [ind- ↵  
bitlen] [<0-28>]
```

Parameters

subscriber

Subscriber management commands

imsi

Identify subscriber by IMSI

msisdn

Identify subscriber by MSISDN (phone number)

id

Identify subscriber by database ID

imei

Identify subscriber by IMEI

IDENT

IMSI/MSISDN/ID/IMEI of the subscriber

update

Set or update subscriber data

aud3g

Set UMTS authentication data (3G, and 2G with UMTS AKA)

milenage

Use Milenage algorithm

k

Set Encryption Key K

K

K as 32 hexadecimal characters

op

Set OP key

opc

Set OPC key

OP_C

OP or OPC as 32 hexadecimal characters

[ind-bitlen]

Set IND bit length

[<0-28>]

IND bit length value (default: 5)

subscriber (imsi|msisdn|id|imei) IDENT update aud3g none**Command**

```
subscriber (imsi|msisdn|id|imei) IDENT update aud3g none
```

Parameters**subscriber**

Subscriber management commands

imsi

Identify subscriber by IMSI

msisdn

Identify subscriber by MSISDN (phone number)

id

Identify subscriber by database ID

imei

Identify subscriber by IMEI

IDENT

IMSI/MSISDN/ID/IMEI of the subscriber

update

Set or update subscriber data

aud3g

Set UMTS authentication data (3G, and 2G with UMTS AKA)

none

Delete 3G authentication data

subscriber (imsi|msisdn|id|imei) IDENT update imei (none|IMEI)**Command**

```
subscriber (imsi|msisdn|id|imei) IDENT update imei (none|IMEI)
```

Parameters

subscriber

Subscriber management commands

imsi

Identify subscriber by IMSI

msisdn

Identify subscriber by MSISDN (phone number)

id

Identify subscriber by database ID

imei

Identify subscriber by IMEI

IDENT

IMSI/MSISDN/ID/IMEI of the subscriber

update

Set or update subscriber data

imei

Set IMEI of the subscriber (normally populated from MSC, no need to set this manually)

none

Forget IMEI

IMEI

Set IMEI (use for debug only!)

subscriber (imsi|msisdn|id|imei) IDENT update msisdn (none|MSISDN)**Command**

```
subscriber (imsi|msisdn|id|imei) IDENT update msisdn (none|MSISDN)
```

Parameters**subscriber**

Subscriber management commands

imsi

Identify subscriber by IMSI

msisdn

Identify subscriber by MSISDN (phone number)

id

Identify subscriber by database ID

imei

Identify subscriber by IMEI

IDENT

IMSI/MSISDN/ID/IMEI of the subscriber

update

Set or update subscriber data

msisdn

Set MSISDN (phone number) of the subscriber

none

Remove MSISDN (phone number)

MSISDN

New MSISDN (phone number)

subscriber (imsi|msisdn|id|imei) IDENT update network-access-mode (none|cs|ps|cs...**Command**

```
subscriber (imsi|msisdn|id|imei) IDENT update network-access-mode (none|cs|ps|cs+ps)
```

Parameters**subscriber**

Subscriber management commands

imsi

Identify subscriber by IMSI

msisdn

Identify subscriber by MSISDN (phone number)

id

Identify subscriber by database ID

imei

Identify subscriber by IMEI

IDENT

IMSI/MSISDN/ID/IMEI of the subscriber

update

Set or update subscriber data

network-access-mode

Set Network Access Mode (NAM) of the subscriber

none

Do not allow access to circuit switched or packet switched services

cs

Allow access to circuit switched services only

ps

Allow access to packet switched services only

cs+ps

Allow access to both circuit and packet switched services

subscriber imsi IDENT create

Command

```
subscriber imsi IDENT create
```

Parameters

subscriber

Subscriber management commands

imsi

Identify subscriber by IMSI

IDENT

IMSI/MSISDN/ID of the subscriber

create

Create subscriber by IMSI

terminal length <0-512>

Command

```
terminal length <0-512>
```

Parameters

terminal

Set terminal line parameters

length

Set number of lines on a screen

<0-512>

Number of lines on screen (0 for no pausing)

terminal monitor

Command

```
terminal monitor
```

Parameters

terminal

Set terminal line parameters

monitor

Copy debug output to the current terminal line

terminal no length

Command

```
terminal no length
```

Parameters

terminal

Set terminal line parameters

no

Negate a command or set its defaults

length

Set number of lines on a screen

terminal no monitor

Command

```
terminal no monitor
```

Parameters

terminal

Set terminal line parameters

no

Negate a command or set its defaults

monitor

Copy debug output to the current terminal line

who

Command

```
who
```

Parameters

who

Display who is on vty

config

The config node is the root for all configuration commands, which are identical to the config file format. Changes made on the telnet VTY can be made persistent with the 'write file' command.

banner motd default

Command

```
banner motd default
```

Parameters

banner

Set banner string

motd

Strings for motd

default

Default string

banner motd file [FILE]

Command

```
banner motd file [FILE]
```

Parameters

banner

Set banner

motd

Banner for motd

file

Banner from a file

[FILE]

Filename

cpu-sched

Command

```
cpu-sched
```

Parameters

cpu-sched

Configure CPU Scheduler related settings

ctrl

Command

```
ctrl
```

Parameters

ctrl

Configure the Control Interface

enable password (8|) WORD

Command

```
enable password (8|) WORD
```

Parameters

enable

Modify enable password parameters

password

Assign the privileged level password

8

Specifies a HIDDEN password will follow

dummy string

WORD

The HIDDEN 'enable' password string

enable password LINE

Command

```
enable password LINE
```

Parameters

enable

Modify enable password parameters

password

Assign the privileged level password

LINE

The UNENCRYPTED (cleartext) 'enable' password

hlr

Command

```
hlr
```

Parameters

hlr

Configure the HLR

hostname WORD

Command

```
hostname WORD
```

Parameters

hostname

Set system's network name

WORD

This system's network name

line vty

Command

```
line vty
```

Parameters

line

Configure a terminal line

vtty

Virtual terminal

log alarms <2-32700>

Command

```
log alarms <2-32700>
```

Parameters

log

Configure logging sub-system

alarms

Logging alarms to osmo_strrb

<2-32700>

Maximum number of messages to log

log file .FILENAME

Command

```
log file .FILENAME
```

Parameters

log

Configure logging sub-system

file

Logging to text file

.FILENAME

Filename

log gsmtap [HOSTNAME]

Command

```
log gsmtap [HOSTNAME]
```

Parameters

log

Configure logging sub-system

gsmtap

Logging via GSMTAP

[HOSTNAME]

Host name to send the GSMTAP logging to (UDP port 4729)

log stderr

Command

```
log stderr
```

Parameters

log

Configure logging sub-system

stderr

Logging via STDERR of the process

log syslog (authpriv|cron|daemon|ftp|lpr|mail|news|user|uucp)

Command

```
log syslog (authpriv|cron|daemon|ftp|lpr|mail|news|user|uucp)
```

Parameters

log

Configure logging sub-system

syslog

Logging via syslog

authpriv

Security/authorization messages facility

cron

Clock daemon (cron/at) facility

daemon

General system daemon facility

ftp

Ftp daemon facility

lpr

Line printer facility

mail

Mail facility

news

News facility

user

Generic facility

uucp

UUCP facility

log syslog local <0-7>

Command

```
log syslog local <0-7>
```

Parameters

log

Configure logging sub-system

syslog

Logging via syslog

local

Syslog LOCAL facility

<0-7>

Local facility number

mslookup

Command

```
mslookup
```

Parameters

mslookup

Configure Distributed GSM mslookup

no banner motd

Command

```
no banner motd
```

Parameters

no

Negate a command or set its defaults

banner

Set banner string

motd

Strings for motd

no enable password

Command

```
no enable password
```

Parameters

no

Negate a command or set its defaults

enable

Modify enable password parameters

password

Assign the privileged level password

no hostname [HOSTNAME]

Command

```
no hostname [HOSTNAME]
```

Parameters

no

Negate a command or set its defaults

hostname

Reset system's network name

[HOSTNAME]

Host name of this router

no log alarms

Command

```
no log alarms
```

Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

alarms

Logging alarms to osmo_strrb

no log file .FILENAME

Command

```
no log file .FILENAME
```

Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

file

Logging to text file

.FILENAME

Filename

no log stderr

Command

```
no log stderr
```

Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

stderr

Logging via STDERR of the process

no log syslog

Command

```
no log syslog
```

Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

syslog

Logging via syslog

no service advanced-vty

Command

```
no service advanced-vty
```

Parameters

no

Negate a command or set its defaults

service

Set up miscellaneous service

advanced-vty

Enable advanced mode vty interface

no service terminal-length [<0-512>]

Command

```
no service terminal-length [<0-512>]
```

Parameters

no

Negate a command or set its defaults

service

Set up miscellaneous service

terminal-length

System wide terminal length configuration

[<0-512>]

Number of lines of VTY (0 means no line control)

no stats reporter log

Command

```
no stats reporter log
```

Parameters

no

Negate a command or set its defaults

stats

Configure stats sub-system

reporter

Configure a stats reporter

log

Report to the logger

no stats reporter statsd

Command

```
no stats reporter statsd
```

Parameters

no

Negate a command or set its defaults

stats

Configure stats sub-system

reporter

Configure a stats reporter

statsd

Report to a STATSD server

password (8|) WORD

Command

```
password (8|) WORD
```

Parameters

password

Assign the terminal connection password

8

Specifies a HIDDEN password will follow

dummy string

WORD

The HIDDEN line password string

password LINE

Command

```
password LINE
```

Parameters

password

Assign the terminal connection password

LINE

The UNENCRYPTED (cleartext) line password

service advanced-vty

Command

```
service advanced-vty
```

Parameters

service

Set up miscellaneous service

advanced-vty

Enable advanced mode vty interface

service terminal-length <0-512>

Command

```
service terminal-length <0-512>
```

Parameters

service

Set up miscellaneous service

terminal-length

System wide terminal length configuration

<0-512>

Number of lines of VTY (0 means no line control)

show history

Command

```
show history
```

Parameters

show

Show running system information

history

Display the session command history

stats interval <0-65535>

Command

```
stats interval <0-65535>
```

Parameters

stats

Configure stats sub-system

interval

Set the reporting interval

<0-65535>

Interval in seconds (0 disables the reporting interval)

stats reporter log

Command

```
stats reporter log
```

Parameters

stats

Configure stats sub-system

reporter

Configure a stats reporter

log

Report to the logger

stats reporter statsd

Command

```
stats reporter statsd
```

Parameters

stats

Configure stats sub-system

reporter

Configure a stats reporter

statsd

Report to a STATSD server

config-log

The log node is commonly available in all Osmocom programs and allows configuring logging to stderr and/or log files, including logging category and level filtering as well as output formatting options. Note that the 'logging enable' command is required to make logging commands available on the telnet VTY.

logging color (0|1)

Command

```
logging color (0|1)
```

Parameters

logging

Configure logging

color

Configure color-printing for log messages

0

Don't use color for printing messages

1

Use color for printing messages

logging filter all (0|1)

Disable/enable general log output on a given target. Typically, 'logging filter all 1' allows to see the usual log output on a given target. Setting to '0' can be useful when logging to the telnet VTY console: mute all log output to allow typing VTY commands on the telnet prompt without interference from log output; 'logging filter all 1' then re-enables logging in the same log output configuration as before. Some applications provide more specific filters, e.g. to log a given IMSI only. To employ such filters, set 'logging filter all 0' to disable general logging, and then enable a more specific filter instead.

Command

```
logging filter all (0|1)
```

Parameters**logging**

Configure logging

filter

Filter log messages

all

Do you want to log all messages?

0

Only print messages matched by other filters

1

Bypass filter and print all messages

logging level (main|db|auc|ss|mslookup|lu|dgsm|lglobal|llapd|linp|lmux|lmi|lmib|...**Command**

```
logging level (main|db|auc|ss|mslookup|lu|dgsm|lglobal|llapd|linp|lmux|lmi|lmib|lsms| ↵
lctrl|lgtp|lstats|lgsup|loap|lss7|lsccp|lsua|lm3ua|lmgcp|ljibuf|lrspro) (debug|info ↵
|notice|error|fatal)
```

Parameters**logging**

Configure logging

level

Set the log level for a specified category

main

Main Program

db

Database Layer

auc

Authentication Center

ss

Supplementary Services

mslookup

Mobile Subscriber Lookup

lu

Location Updating

dgsm

Distributed GSM: MS lookup and proxy

lglobal

Library-internal global log family

llapd

LAPD in libosmogsm

linp

A-bis Input Subsystem

lmux

A-bis B-Subchannel TRAU Frame Multiplex

lmi

A-bis Input Driver for Signalling

lmib

A-bis Input Driver for B-Channels (voice)

lsms

Layer3 Short Message Service (SMS)

lctrl

Control Interface

lgtp

GPRS GTP library

lstats

Statistics messages and logging

lgsup

Generic Subscriber Update Protocol

loap	Osmocom Authentication Protocol
lss7	libosmo-sigtran Signalling System 7
lsccp	libosmo-sigtran SCCP Implementation
lsua	libosmo-sigtran SCCP User Adaptation
lm3ua	libosmo-sigtran MTP3 User Adaptation
lmgcp	libosmo-mgcp Media Gateway Control Protocol
ljibuf	libosmo-netif Jitter Buffer
lrspro	Remote SIM protocol
debug	Log debug messages and higher levels
info	Log informational messages and higher levels
notice	Log noticeable messages and higher levels
error	Log error messages and higher levels
fatal	Log only fatal messages

logging level force-all (debug|info|notice|error|fatal)

Command

```
logging level force-all (debug|info|notice|error|fatal)
```

Parameters

logging

Configure logging

level

Set the log level for a specified category

force-all

Globally force all logging categories to a specific level. This is released by the 'no logging level force-all' command. Note: any 'logging level <category> <level>' commands will have no visible effect after this, until the forced level is released.

debug

Log debug messages and higher levels

info

Log informational messages and higher levels

notice

Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

logging level set-all (debug|info|notice|error|fatal)**Command**

```
logging level set-all (debug|info|notice|error|fatal)
```

Parameters**logging**

Configure logging

level

Set the log level for a specified category

set-all

Once-off set all categories to the given log level. There is no single command to take back these changes -- each category is set to the given level, period.

debug

Log debug messages and higher levels

info

Log informational messages and higher levels

notice

Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

logging print category (0|1)

Command

```
logging print category (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

category

Configure log message

0

Don't prefix each log message

1

Prefix each log message with category/subsystem name

logging print category-hex (0|1)

Command

```
logging print category-hex (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

category-hex

Configure log message

0

Don't prefix each log message

1

Prefix each log message with category/subsystem nr in hex ('<000b>')

logging print extended-timestamp (0|1)

Command

```
logging print extended-timestamp (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

extended-timestamp

Configure log message timestamping

0

Don't prefix each log message

1

Prefix each log message with current timestamp with YYYYMMDDhhmmssnnn

logging print file (0|1|basename) [last]

Command

```
logging print file (0|1|basename) [last]
```

Parameters

logging

Configure logging

print

Log output settings

file

Configure log message

0

Don't prefix each log message

1

Prefix each log message with the source file and line

basename

Prefix each log message with the source file's basename (strip leading paths) and line

[last]

Log source file info at the end of a log line. If omitted, log source file info just before the log text.

logging print level (0|1)

Command

```
logging print level (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

level

Configure log message

0

Don't prefix each log message

1

Prefix each log message with the log level name

logging timestamp (0|1)

Command

```
logging timestamp (0|1)
```

Parameters

logging

Configure logging

timestamp

Configure log message timestamping

0

Don't prefix each log message

1

Prefix each log message with current timestamp

no logging level force-all

Command

```
no logging level force-all
```

Parameters

no

Negate a command or set its defaults

logging

Configure logging

level

Set the log level for a specified category

force-all

Release any globally forced log level set with 'logging level force-all <level>'

config-stats

disable

Command

```
disable
```

Parameters

disable

Disable the reporter

enable

Command

```
enable
```

Parameters

enable

Enable the reporter

flush-period <0-65535>

Command

```
flush-period <0-65535>
```

Parameters

flush-period

Configure stats sub-system

<0-65535>

Send all stats even if they have not changed (i.e. force the flush) every N-th reporting interval. Set to 0 to disable regular flush (default).

level (global|peer|subscriber)

Command

```
level (global|peer|subscriber)
```

Parameters

level

Set the maximum group level

global

Report global groups only

peer

Report global and network peer related groups

subscriber

Report global, peer, and subscriber groups

local-ip ADDR

Command

```
local-ip ADDR
```

Parameters

local-ip

Set the IP address to which we bind locally

ADDR

IP Address

mtu <100-65535>

Command

```
mtu <100-65535>
```

Parameters

mtu

Set the maximum packet size

<100-65535>

Size in byte

no local-ip

Command

```
no local-ip
```

Parameters

no

Negate a command or set its defaults

local-ip

Set the IP address to which we bind locally

no mtu

Command

```
no mtu
```

Parameters

no

Negate a command or set its defaults

mtu

Set the maximum packet size

no prefix

Command

```
no prefix
```

Parameters

no

Negate a command or set its defaults

prefix

Set the item name prefix

prefix PREFIX

Command

```
prefix PREFIX
```

Parameters

prefix

Set the item name prefix

PREFIX

The prefix string

remote-ip ADDR

Command

```
remote-ip ADDR
```

Parameters

remote-ip

Set the remote IP address to which we connect

ADDR

IP Address

remote-port <1-65535>

Command

```
remote-port <1-65535>
```

Parameters

remote-port

Set the remote port to which we connect

<1-65535>

Remote port number

config-line

bind A.B.C.D [<0-65535>]

Command

```
bind A.B.C.D [<0-65535>]
```

Parameters

bind

Accept VTY telnet connections on local interface

A.B.C.D

Local interface IP address (default: 127.0.0.1)

[<0-65535>]

Local TCP port number

login

Command

```
login
```

Parameters

login

Enable password checking

no login

Command

```
no login
```

Parameters

no

Negate a command or set its defaults

login

Enable password checking

config-ctrl

bind A.B.C.D

Command

```
bind A.B.C.D
```

Parameters

bind

Set bind address to listen for Control connections

A.B.C.D

Local IP address (default 127.0.0.1)

config-cpu-sched

cpu-affinity (self|all|<0-4294967295>|THREADNAME) CPUHEXMASK [delay]

Command

```
cpu-affinity (self|all|<0-4294967295>|THREADNAME) CPUHEXMASK [delay]
```

Parameters

cpu-affinity

Set CPU affinity mask on a (group of) thread(s)

self

Set CPU affinity mask on thread running the VTY

all

Set CPU affinity mask on all process' threads

<0-4294967295>

Set CPU affinity mask on a thread with specified PID

THREADNAME

Set CPU affinity mask on a thread with specified thread name

CPUHEXMASK

CPU affinity mask

[delay]

If set, delay applying the affinity mask now and let the app handle it at a later point

policy rr <1-32>

Command

```
policy rr <1-32>
```

Parameters

policy

Set the scheduling policy to use for the process

rr

Use the SCHED_RR real-time scheduling algorithm

<1-32>

Set the SCHED_RR real-time priority

config-hlr

database PATH

Command

```
database PATH
```

Parameters

database

Set the path to the HLR database file

PATH

Relative or absolute file system path to the database file (default is 'hlr.db')

euse NAME

Command

```
euse NAME
```

Parameters

euse

Configure a particular External USSD Entity

NAME

Alphanumeric name of the External USSD Entity

gsup

Command

```
gsup
```

Parameters

gsup

Configure GSUP options

ncss-guard-timeout <0-255>

Command

```
ncss-guard-timeout <0-255>
```

Parameters

ncss-guard-timeout

Set guard timer for NCSS (call independent SS) session activity

<0-255>

Guard timer value (sec.), or 0 to disable

no euse NAME

Command

```
no euse NAME
```

Parameters

no

Negate a command or set its defaults

euse

Remove a particular External USSD Entity

NAME

Alphanumeric name of the External USSD Entity

no store-imei

Command

```
no store-imei
```

Parameters

no

Do not save the IMEI in the database, when receiving Check IMEI requests.

store-imei

(null)

no subscriber-create-on-demand

Command

```
no subscriber-create-on-demand
```

Parameters

no

Do not make a new record when a subscriber is first seen.

subscriber-create-on-demand

(null)

no ussd default-route

Command

```
no ussd default-route
```

Parameters

no

Negate a command or set its defaults

ussd

USSD Configuration

default-route

Remove the default-route for all USSD to unknown destinations

no ussd route prefix PREFIX

Command

```
no ussd route prefix PREFIX
```

Parameters

no

Negate a command or set its defaults

ussd

USSD Configuration

route

Routing Configuration

prefix

Prefix-Matching Route

PREFIX

USSD Prefix

store-imei

Command

```
store-imei
```

Parameters

store-imei

Save the IMEI in the database when receiving Check IMEI requests. Note that an MSC does not necessarily send Check IMEI requests (for OsmoMSC, you may want to set 'check-imei-rqd 1').

subscriber-create-on-demand (no-msisdn|<3-15>) (none|cs|ps|cs+ps)

Command

```
subscriber-create-on-demand (no-msisdn|<3-15>) (none|cs|ps|cs+ps)
```

Parameters

subscriber-create-on-demand

Make a new record when a subscriber is first seen.

no-msisdn

Do not automatically assign MSISDN.

<3-15>

Length of an automatically assigned MSISDN.

none

Do not allow any NAM (Network Access Mode) by default.

cs

Allow access to circuit switched NAM by default.

ps

Allow access to packet switched NAM by default.

cs+ps

Allow access to circuit and packet switched NAM by default.

ussd default-route external EUSE

Command

```
ussd default-route external EUSE
```

Parameters

ussd

USSD Configuration

default-route

Configure default-route for all USSD to unknown destinations

external

External USSD Handler

EUSE

Name of External USSD Handler (IPA CCM ID)

ussd route prefix PREFIX external EUSE

Command

```
ussd route prefix PREFIX external EUSE
```

Parameters

ussd

USSD Configuration

route

Routing Configuration

prefix

Prefix-Matching Route

PREFIX

USSD Prefix

external

External USSD Handler

EUSE

Name of External USSD Handler (IPA CCM ID)

ussd route prefix PREFIX internal (own-msisdn|own-imsi)

Command

```
ussd route prefix PREFIX internal (own-msisdn|own-imsi)
```

Parameters

ussd

USSD Configuration

route

Routing Configuration

prefix

Prefix-Matching Route

PREFIX

USSD Prefix

internal

Internal USSD Handler

own-msisdn

Respond with subscribers' own MSISDN

own-imsi

Respond with subscribers' own IMSI

config-hlr-gsup

bind ip A.B.C.D

Command

```
bind ip A.B.C.D
```

Parameters

bind

Listen/Bind related socket option

ip

IP information

A.B.C.D

IPv4 Address to bind the GSUP interface to

ipa-name NAME

Command

```
ipa-name NAME
```

Parameters

ipa-name

Set the IPA name of this HLR, for proxying to remote HLRs

NAME

A globally unique name for this HLR. For example: PLMN + redundancy server number: HLR-901-70-0. This name is used for GSUP routing and must be set if multiple HLRs interconnect (e.g. mslookup for Distributed GSM).

config-hlr-euse

config-mslookup

client

Command

```
client
```

Parameters

client

Enable and configure Distributed GSM mslookup client

mdns bind [IP] [<1-65535>]

Command

```
mdns bind [IP] [<1-65535>]
```

Parameters

mdns

Multicast DNS related configuration

bind

Convenience shortcut: enable and configure both server and client for mDNS mslookup

[IP]

multicast IPv4 address like 239.192.23.42 or IPv6 address like ff08::23:42

[<1-65535>]

mDNS UDP Port number

mdns domain-suffix DOMAIN_SUFFIX

Command

```
mdns domain-suffix DOMAIN_SUFFIX
```

Parameters

mdns

Multicast DNS related configuration

domain-suffix

mDNS domain suffix (default: mdns.osmocom.org). This is appended and stripped from mDNS packets during encoding/decoding, so we don't collide with top-level domains administrated by IANA

DOMAIN_SUFFIX

mDNS domain suffix (default: mdns.osmocom.org). This is appended and stripped from mDNS packets during encoding/decoding, so we don't collide with top-level domains administrated by IANA

no client

Command

```
no client
```

Parameters

no

Negate a command or set its defaults

client

Disable Distributed GSM mslookup client

no mdns bind

Command

```
no mdns bind
```

Parameters

no

Negate a command or set its defaults

mdns

Disable both server and client for mDNS mslookup

bind

(null)

no server

Command

```
no server
```

Parameters

no

Negate a command or set its defaults

server

Disable Distributed GSM mslookup server

server

Command

```
server
```

Parameters

server

Enable and configure Distributed GSM mslookup server

config-mslookup-server

mdns bind [IP] [<1-65535>]

Command

```
mdns bind [IP] [<1-65535>]
```

Parameters

mdns

Multicast DNS related configuration

bind

Configure where the mDNS server listens for mslookup requests

[IP]

multicast IPv4 address like 239.192.23.42 or IPv6 address like ff08::23:42

[<1-65535>]

mDNS UDP Port number

mdns domain-suffix DOMAIN_SUFFIX

Command

```
mdns domain-suffix DOMAIN_SUFFIX
```

Parameters

mdns

Multicast DNS related configuration

domain-suffix

mDNS domain suffix (default: mdns.osmocom.org). This is appended and stripped from mDNS packets during encoding/decoding, so we don't collide with top-level domains administrated by IANA

DOMAIN_SUFFIX

mDNS domain suffix (default: mdns.osmocom.org). This is appended and stripped from mDNS packets during encoding/decoding, so we don't collide with top-level domains administrated by IANA

msc ipa-name .IPA_NAME

Command

```
msc ipa-name .IPA_NAME
```

Parameters

msc

Configure services for individual local MSCs

ipa-name

Identify locally connected MSC by IPA Unit Name

.IPA_NAME

IPA Unit Name of the local MSC to configure

no mdns bind

Command

```
no mdns bind
```

Parameters

no

Negate a command or set its defaults

mdns

Disable server for mDNS mslookup (do not answer remote requests)

bind

(null)

no service NAME

Command

```
no service NAME
```

Parameters

no

Negate a command or set its defaults

service

Remove one or more service address entries

NAME

mslookup service name, e.g. sip.voice or smpp.sms

no service NAME at IP <1-65535>

Command

```
no service NAME at IP <1-65535>
```

Parameters

no

Negate a command or set its defaults

service

Remove one or more service address entries

NAME

mslookup service name, e.g. sip.voice or smpp.sms

at

at

IP

IPv4 address like 1.2.3.4 or IPv6 address like a:b:c:d::1

<1-65535>

Service-specific port number

service NAME at IP <1-65535>

Command

```
service NAME at IP <1-65535>
```

Parameters

service

Configure addresses of local services, as sent in replies to remote mslookup requests.

NAME

mslookup service name, e.g. sip.voice or smpp.sms

at

at

IP

IPv4 address like 1.2.3.4 or IPv6 address like a:b:c:d::1

<1-65535>

Service-specific port number

config-mslookup-server-msc

no service NAME

Command

```
no service NAME
```

Parameters

no

Negate a command or set its defaults

service

Remove one or more service address entries

NAME

mslookup service name, e.g. sip.voice or smpp.sms

no service NAME at IP <1-65535>

Command

```
no service NAME at IP <1-65535>
```

Parameters

no

Negate a command or set its defaults

service

Remove one or more service address entries

NAME

mslookup service name, e.g. sip.voice or smpp.sms

at

at

IP

IPv4 address like 1.2.3.4 or IPv6 address like a:b:c:d::1

<1-65535>

Service-specific port number

service NAME at IP <1-65535>

Command

```
service NAME at IP <1-65535>
```

Parameters

service

Configure addresses of local services, as sent in replies to remote mslookup requests.

NAME

mslookup service name, e.g. sip.voice or smpp.sms

at

at

IP

IPv4 address like 1.2.3.4 or IPv6 address like a:b:c:d::1

<1-65535>

Service-specific port number

config-mslookup-client

gateway-proxy IP [<1-65535>]

Command

```
gateway-proxy IP [<1-65535>]
```

Parameters

gateway-proxy

Configure a fixed IP address to send all GSUP requests for unknown IMSIs to, without invoking a lookup for IMSI

IP

IP address of the remote HLR

[<1-65535>]

GSUP port number (omit for default 4222)

mdns bind [IP] [<1-65535>]

Command

```
mdns bind [IP] [<1-65535>]
```

Parameters

mdns

Multicast DNS related configuration

bind

Enable mDNS client, and configure multicast address to send mDNS mslookup requests to

[IP]

multicast IPv4 address like 239.192.23.42 or IPv6 address like ff08::23:42

[<1-65535>]

mDNS UDP Port number

mdns domain-suffix DOMAIN_SUFFIX

Command

```
mdns domain-suffix DOMAIN_SUFFIX
```

Parameters

mdns

Multicast DNS related configuration

domain-suffix

mDNS domain suffix (default: mdns.osmocom.org). This is appended and stripped from mDNS packets during encoding/decoding, so we don't collide with top-level domains administrated by IANA

DOMAIN_SUFFIX

mDNS domain suffix (default: mdns.osmocom.org). This is appended and stripped from mDNS packets during encoding/decoding, so we don't collide with top-level domains administrated by IANA

no gateway-proxy

Command

```
no gateway-proxy
```

Parameters

no

Negate a command or set its defaults

gateway-proxy

Disable gateway proxy for GSUP with unknown IMSIs

no mdns bind

Command

```
no mdns bind
```

Parameters

no

Negate a command or set its defaults

mdns

Disable mDNS client, do not query remote services by mDNS

bind

(null)

timeout <1-100000>

Command

```
timeout <1-100000>
```

Parameters

timeout

How long should the mslookup client wait for remote responses before evaluating received results

<1-100000>

timeout in milliseconds
